

Quadlander250 (UA25A-6) set up instruction

SANYANG INDUSTRY/ SERVICE DEPT. 2005/May.

*** CAUTION : Do not start the engine or run the engine without battery fitted on the vehicle. Otherwise electrical components would be damaged.**

* contents of separate parts box :




* contents of screw sets :



1. Open the box.



2. Tighten the handle bar.

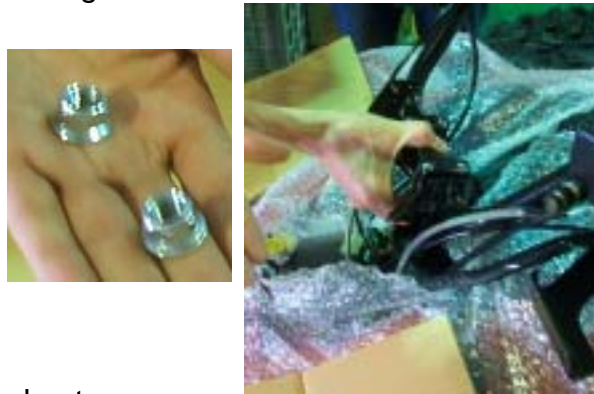

3. Tighten the speedometer cable onto speedometer.

Install the speedometer couplers to the wireharness.onto handlebar.

4. Tighten the speedometer.



5. Inflate the tire to specific pressure.

Front : AT22X7-10 , 3.8 +/- 0.2psi

Rear : AT 22X10-9 , 3.8 +/- 0.2psi

6. Install the rear tre. Fix the washer & nut onto the rear axle.



7. Install the front tire. Fix the nuts onto the hub (4 nuts).



8. Tighten the 4 nuts.
Torque : 4.5 ~ 5.5 kgf-m



9. Tighten the rear wheel nut and install the pin.

Torque : 6.5 ~ 8.5 kgf-m



10. Install the rear carrier panel.




11. Install the front cover.



12. Install R/L handle fender.



13. Install the front & rear hub cover (4 screws/each).

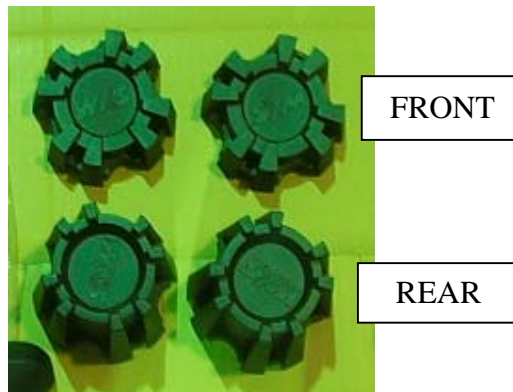

14. Install the trailer hook.



15. Install the trim valve cone & cover.



19. Install back mirrors. Install the battery.



20. Start the engine. Adjust idle rpm in case of need.
Check each components if they're in good function.
idle rpm : 1700 +- 100 rpm

*** CAUTION:**

**Do not start the engine or run the engine without battery fitted on the vehicle.
Otherwise electrical components would be damaged.**